
EVERYTHING IN THE GREEN RANGE? 10 SCFM SUCTION RATE CHECK!

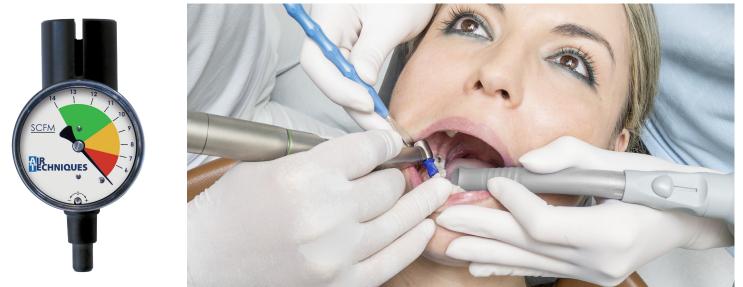

Intraoral spray mist suction with a suction rate above 10 SCFM at the HVE is a key element of hygiene and infection control measures. Your suction system plays the main role in reducing spray mist, thereby effectively preventing the creation of aerosols in the treatment room. With the aid of the Air Techniques FlowKit, the air flow rate can be measured quickly and easily directly from the handpiece.

Using the Air Techniques Flow Meter

